




GOLDBERG BROTHERS INSTALLATION GUIDE

medium-duty Barnfold® 4-door alignment plates

supplementary instructions
for hardware sets
6007M4D and 6007M4DTM

INCLUDED HARDWARE: 4-door alignment plates set (2 pieces)
1 1/8" Wood screws (4)

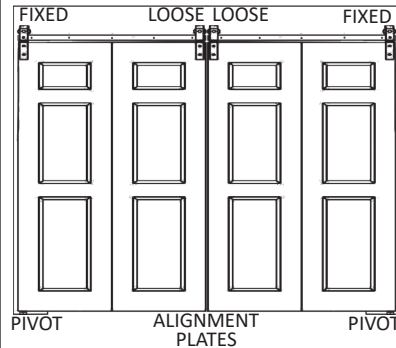

Installation of a 4-door configuration is nearly the same as installing two 2-door hardware sets end-to-end, with the fixed hangers on the two outer door panels and the rolling hangers on the two middle door panels.

For a clear opening, the track should be at least 10" longer than the width of the opening, overlapping the wall on each side by at least 5". With a shorter track, the stacked doors will partially occupy the opening on one or both sides.


Follow the instructions on the installation guide for the included 2-door hardware sets. Repeat each step in mirror image, so that the fixed hangers and pivots are at the ends of the track and the loose hangers are near the middle of the track. Between steps 3 and 4 on the installation guide, follow step 3.5 on this page.

STEP 3.5: attach the 4-door alignment plates

Arrange the two middle door panels edge-to-edge and flush at the top and bottom. They can be touching, or have a gap of up to 1/8". With four 1 1/8" wood screws, attach one of the two alignment plates to the bottom of each of the middle door panels as shown.

The plates should be centered front-to-back on the door panels. For added strength, they can be mortised into the door panels.

bottom view

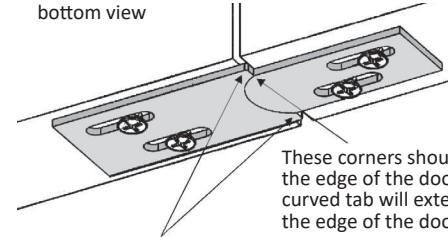

These corners should align with the edge of the door panel. The curved tab will extend beyond the edge of the door panel by 1/4".

Align these corners with edge of the door panel unless allowing for a gap.

Goldberg Brothers barn door hardware products are protected against manufacturing defects with a limited lifetime warranty.

<https://goldbergbrothers.com/warranty/>



GOLDBERG BROTHERS, INC.
10488 W. Centennial Rd., suite 100
Littleton, CO 80128
(303)321-1099